
 
 

 















## VHS-to-DVD -- Basic Dubbing

- 1) If TV is not already powered on, press power button located on back, right-corner of TV.
- 2) Power on Toshiba DVR620 recorder by pressing **RED** power button (top-right)  on the remote control.
- 3) Insert blank DVD by pressing  (OPEN/CLOSE) button on front of recorder to eject and press button again to load the blank DVD into the recorder.
- 4) Press DVD button  (surrounded in **GREEN** and located near STOP button) to choose DVD mode. The recorder displays DVD mode by the indicator light on the front of the recorder.
- 5) Press REC MODE  button (**Note: NOT THE RED REC BUTTON**) located directly below STOP and VCR buttons, and repeatedly press to select the recording mode closest to length of tape recording, rounded up)

XP	SP	LP	EP	SLP
1 hour	2 hours	4 hours	6 hours	8 hours

- 6) Press VCR  button (surrounded in **ORANGE** and located below STOP button) to choose VCR mode. The recorder displays VCR mode by the indicator light on the front of the recorder.
- 7) Insert VHS tape into recorder. If playback does not begin automatically, press PLAY  button to start.
- 8) Press PAUSE  button (located left of VCR button) at the desired recording starting point.
- 9) Press DUBBING  button (located left of REC MODE button) to start recording. **NOTE:** Recording begins and continues until end of tape is reached, 3 minutes of continuous blank space (no image) is encountered, or the STOP button is pressed. The dubbing indicator light will appear on the recorder display screen indicating recording in progress.
- 10) Press STOP  button at desired stopping point. Recorder will begin writing video to the DVD.
- 11) The last procedure is to FINALIZE the recording onto the DVD to allow playback in other DVD players:
  - a) Press SETUP  button (located above UP ARROW )
  - b) Using DOWN ARROW , move on-screen selection to "DVD Menu" and press ENTER .
  - c) "Finalize" will be highlighted, press ENTER  button.
  - d) At the "Finalize disc?" prompt, arrow to YES and press ENTER  button. **NOTE:** Finalizing may take several minutes up to an hour.
- 12) Once finalization completes, press VCR  button and press OPEN/CLOSE  button to eject tape.
- 13) Press  (OPEN/CLOSE) button on front of recorder to unload DVD disc and press button again to close.